


# S6 In-Wall Skimmer

## S6 Skimmer With Level Intake Pipe

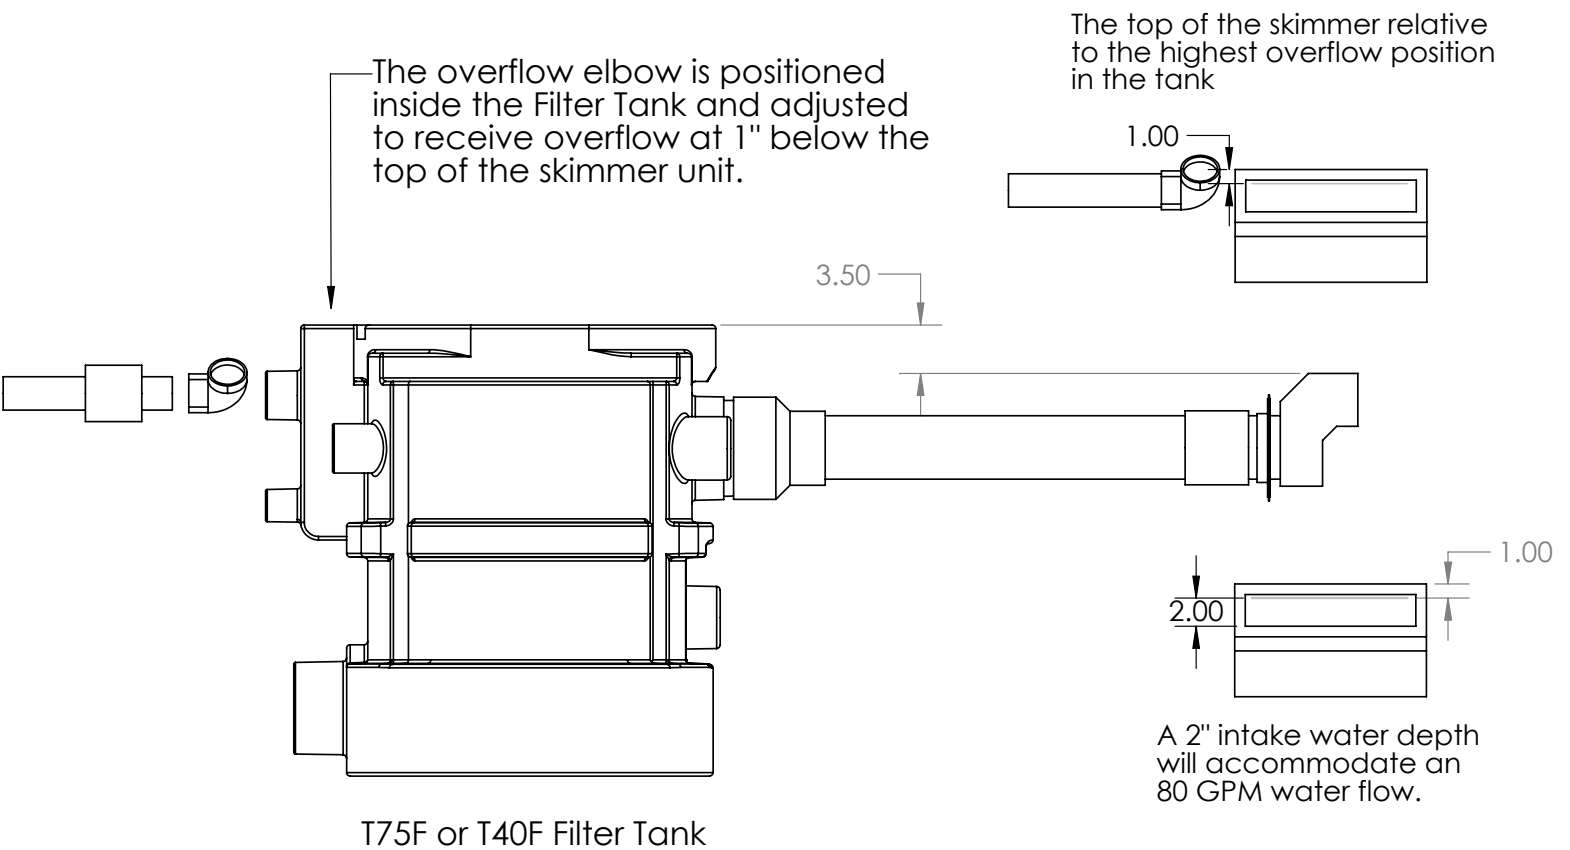


# S6 In-Wall Skimmer

## S6 Skimmer With Sloped Intake Pipe


(The skimmer can be placed higher than shown only if sufficient turn-off containment has been provided)

The overflow elbow is positioned inside the Filter Tank. The highest overflow position is 2.25" from the top.


The top of the skimmer relative to the highest overflow position in the tank

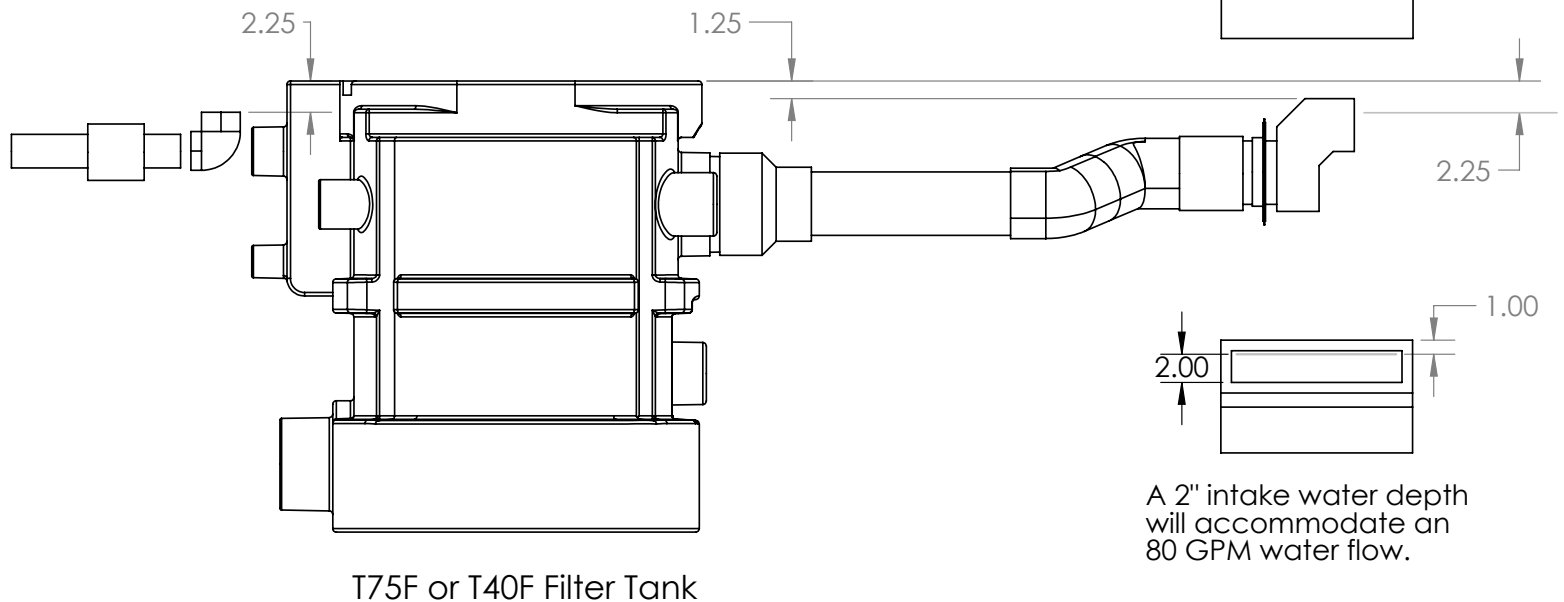

# S6 In-Wall Concrete Placement

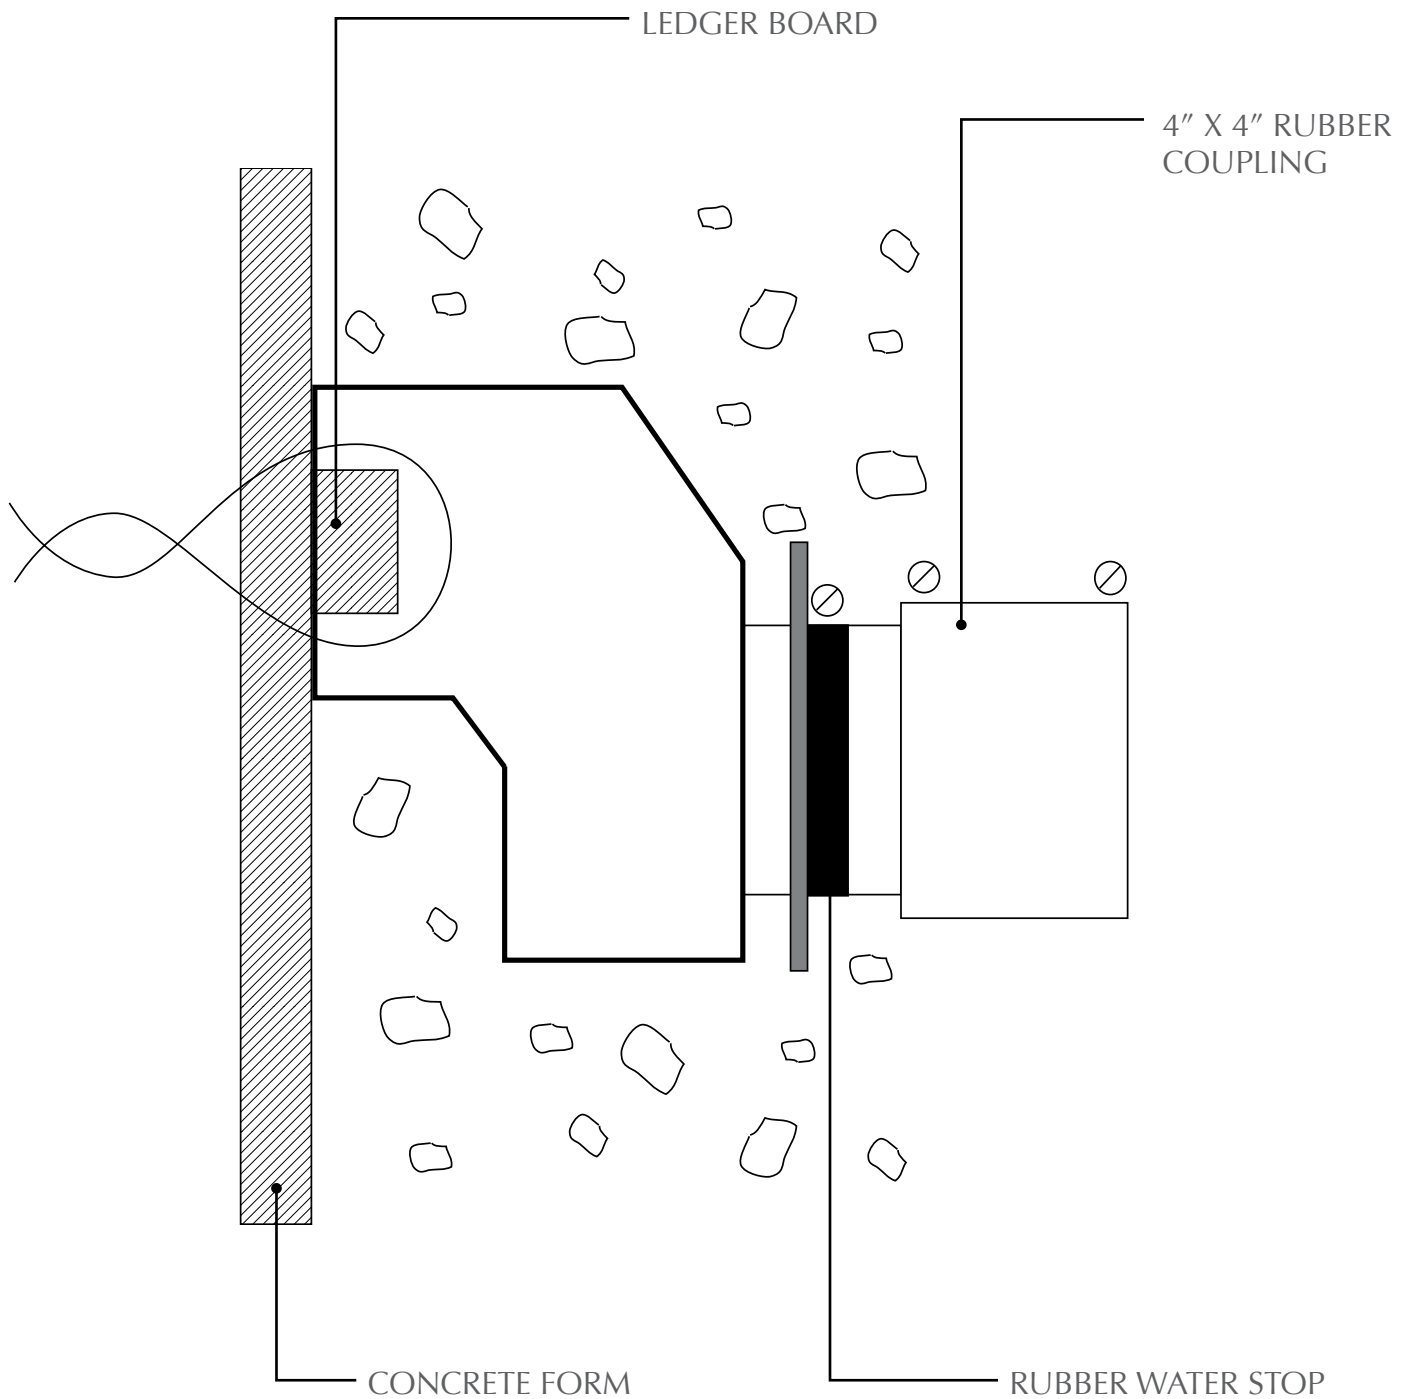

# Skimmer Gasket Installation

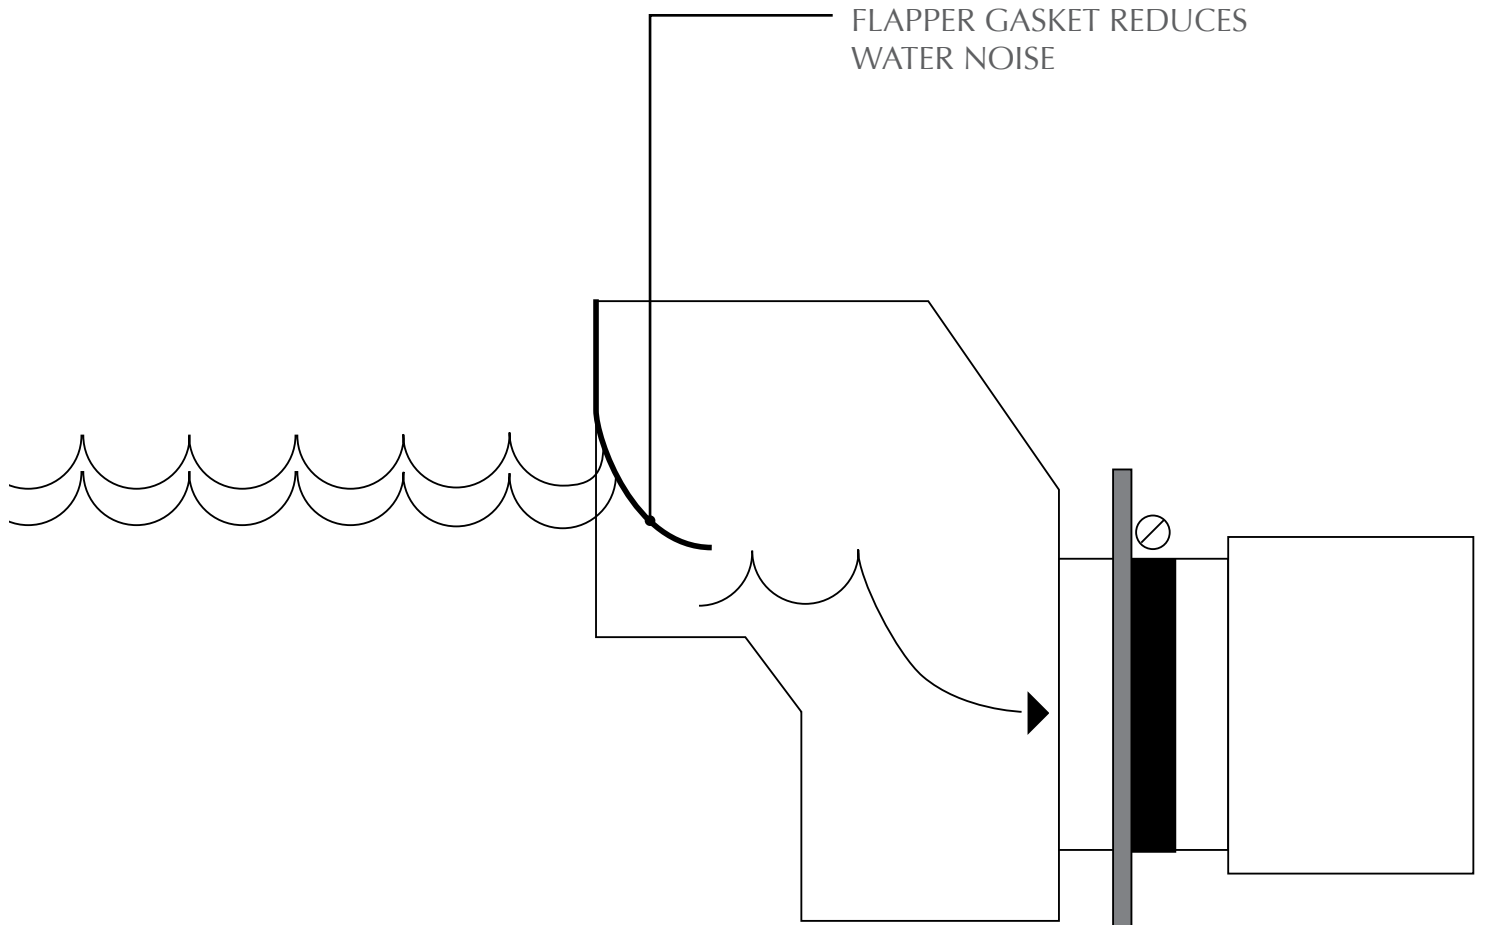


# S6 Waterstop Installation

- 1.** Stretch the waterstop over the 4" port on the S6 Skimmer.



- 2.** Leave a 1" space between the skimmer and the waterstop

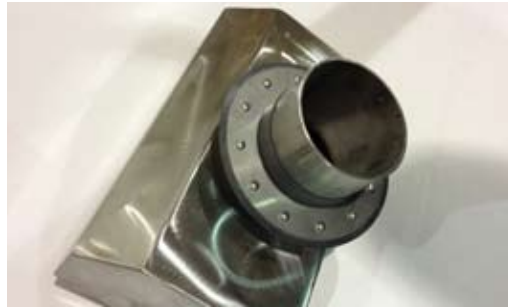

- 3.** Stretch the rubber collar over the port and over the rubber piece on the waterstop.



- 3.** Place the stainless steel band over the collar and tighten the clamp.

